

HOW TO FIT A DESIGN STRIP


1. Measure out the distance from the wall where you want your design strip to sit.



2. Then, mark your guideline ensuring it is even the whole way around the room.




3. Place the track from your saw against your marked line.

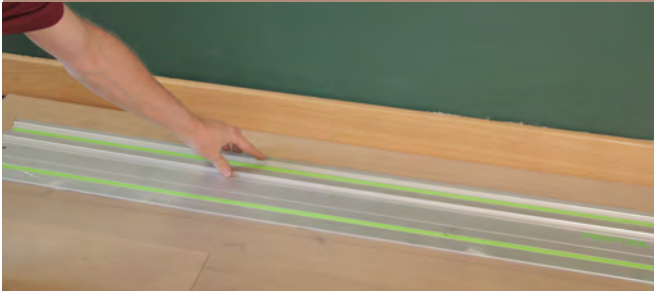

4. Using a blade that is the same width as the design strip, cut into the floor approximately 1mm deeper than the design strip.



5. Then, test the cut for size using a piece of the design strip.

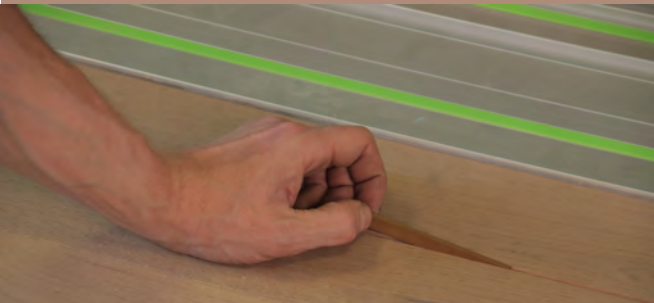

6. Run a piece of sandpaper over the top of the edges to remove any burrs.



7. Apply a thin bead of PVA into the groove and insert the design strip.



8. Then finally, lightly tap your design strip until it's flush to the floor, ensuring that you don't damage the surface.





NEED MORE HELP?

CHECK OUT THIS VIDEO GUIDE:

