



# WOODPECKER

NATURALLY INSPIRED FLOORING

## WARWICK

### INSTALLATION INSTRUCTIONS

[www.woodpeckerflooring.co.uk](http://www.woodpeckerflooring.co.uk) | 02920 888 223 | [info@woodpeckerflooring.co.uk](mailto:info@woodpeckerflooring.co.uk)

---

Disclaimer: Installation guidance is advisory and is based on established good practice and the BS-8201-2011 standard. It is the fitter's responsibility to follow these procedures before, during and after installation. Woodpecker cannot accept responsibility for any issues relating to installation.

## PREPARATION

### BEFORE DELIVERY

The conditions must be ideal before any flooring is fitted. Wet floor screed needs to be fully dried out as residual moisture trapped below the new Warwick flooring may cause mould formation and related problems.

**EXPERT TIP:** A rule of thumb for the drying time of a sand and cement-based screed is one day per millimetre for the first 50mm, and 2.5 days for each millimetre thereafter. So, a 50mm screed should take about two months to dry out, and a 100mm screed will take six months. Plaster takes up to six weeks to dry completely.

### PREPARING THE SUBFLOOR

The surface immediately beneath a Woodpecker floor must be in good structural condition, free from damp rot, fungal or insect infestation, and contaminating residues. It must be flat, smooth, and hard with uneven areas not exceeding 3mm over a 2m area. Naturally, the surface should be vacuumed and totally free of debris before fitting begins. Hot pipes should be well insulated to prevent localised hotspots, which can cause Warwick flooring to distort.

Likewise, certain types of underfloor heating systems incorporate a soft layer. In this instance, a hard overlay board or similar needs to be used.

*N.b. The subfloor should be prepared for installation in accordance with the industry standards outlined in BS-8201-2011.*

### HEATING AND AIR CONDITIONING

The room temperature needs to be stable before Warwick flooring is delivered to site. Heating and/or air conditioning systems should be on and working for at least two weeks before the floor is fitted. The temperature of the floor should never exceed 27°C.

### ATMOSPHERIC CONDITIONS

The room temperature shouldn't be lower than 18°C, or the floor temperature lower than 15°C.

*Note that Warwick flooring is not suitable for wet rooms, or in areas where there is a regular flow of water.*

### ACCLIMATISATION

The sealed, unopened boxes should be laid flat in the centre of the room for 24 hours before installation. The conditions where the flooring is acclimatised should be as close as possible to the typical living conditions.

### INSPECTION

At Woodpecker the highest quality control procedures are in place, however it's essential that every plank is carefully checked before installation. If there are any problems, get in touch with us so that we can rectify them. We are unable to consider any defects after the floor has been installed.

### MOISTURE TESTING

Moisture can cause damage. Even when a subfloor looks dry, it may contain excess moisture in the substrate. Using a professional moisture meter such as the Protimeter MMS will tell you whether or not it's safe to go ahead with installation.

**Readings shouldn't exceed:**

- 70% Relative Humidity (RH) for cement-based concrete.
- 11% Wood Moisture Equivalent (WME) for wooden subfloors or joists.

### EXPANSION GAPS

Warwick is a very stable product, and no expansion gaps are required in stable living conditions between 15 - 25°C. Where temperatures are expected outside of this range, expansion gaps of 2-3mm are needed at all perimeters and fixed objects, with additional expansion gaps required for larger floors exceeding 20 metres and in doorways. Where the floor is subject to direct sunlight, this will need to be increased accordingly and shading should be considered.

## SOME EXTRA TIPS BEFORE YOU BEGIN


### LAYING THE FLOOR

All Woodpecker floors feature beautiful colour variations which naturally occur in real wood. To ensure the overall effect has a good balance of colour and details, take care to blend planks from several packs.



The natural texture of Woodpecker flooring will really come to the fore if the planks are laid in the same direction as the light entering the room. However, if the floor is being fitted over existing floor boards, it should be positioned at right angles to the previous flooring planks.

### THE FIRST ROW


Before installation can begin, a few calculations need to be made. You might have to cut before you start laying. When you've chosen your starting wall, measure the width of the room and divide in half to find your centre line.

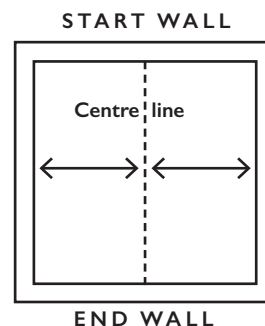

You can either align the centre of a panel or the edge of a panel with the centre line of the room.

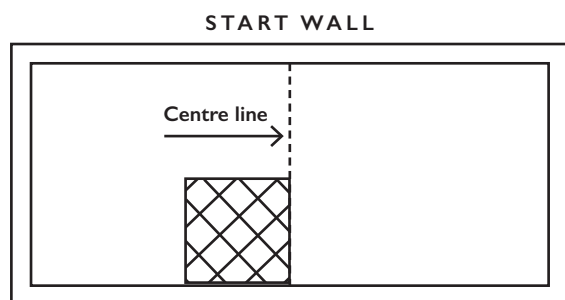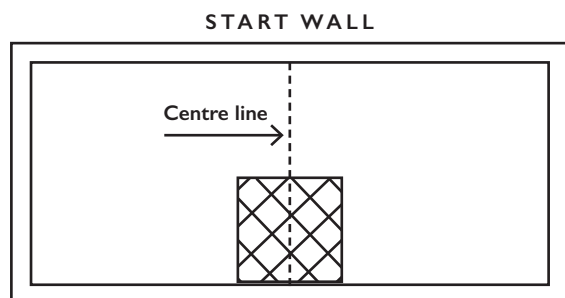

Work out how many panels you would lay across the room. Ensure you do not end up with an edge panel less than 60mm wide. If this is the case, align the centre panel to the alternative, either the centre or the edge.

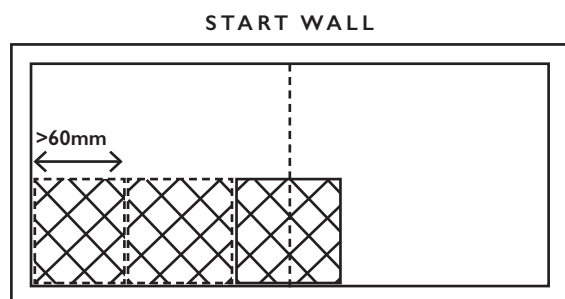

## INSTALLATION


### FLOATING

Warwick flooring can be installed over any dry, hard, sound, flat surface.

Warwick has its own integral underlay. Do not use additional underlay.

### FOLLOW THESE STEPS TO INSTALL

1. Check all planks for possible damage or defects. We can't be held responsible for imperfect boards once they've been fitted.
2. Start installing along the longest wall or an outside wall which is likely to be straight and square with the room. Install your first plank with the tongue facing the wall. Take great care with the alignment as misaligned starter rows can cause side and end gaps.

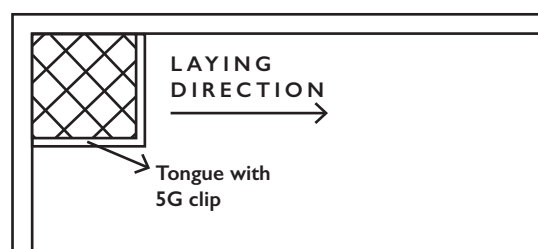

3. We recommend locking the header joints of each row together first so the floor can be installed row by row.

**NOTE:** Never use a rubber mallet or hammer directly on the flooring to fit the locking system. This can damage the flooring and/or finish.

## FLOOR PROTECTION DURING CONSTRUCTION

Always protect the surface of the flooring during installation. Use paper or cardboard that will allow the floor to breathe and tape this to the boards. Never use plastic or polyethylene sheeting to cover the flooring as this will trap moisture and could cause damage.

## DOOR JAMBS

If there is a wooden door jamb, we recommend undercutting it according to the thickness of the flooring. Install the flooring underneath the door jamb but leave the necessary expansion gaps.

## TRIMS

When fitting trims, always fix them to the walls. Never fix them to the floor itself as this will prevent the natural expansion and contraction of the flooring into the expansion space.