

BRECON TRIMS

INSTALLATION INSTRUCTIONS

1. Cut metal trim to fit into position



2. Remove protective film from underside and push trim firmly into place



3. Carefully measure and mark width of top décor strip




4. Score the surface of the floor plank



5. Peel décor strip from surface of floor plank



6. Remove protective film from top of trim

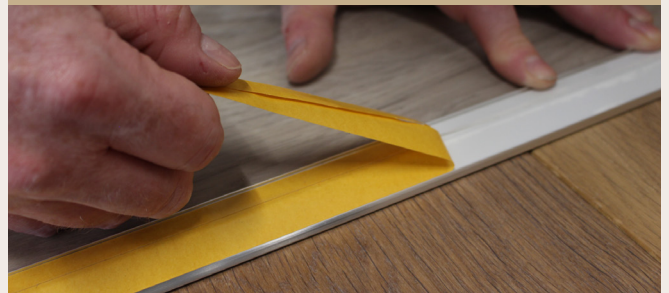

7. Carefully apply décor strip and push into place



8. Trim ends as needed to ensure a good fit

